



Firmware upgrade

Model: iKeyboard 3/4/5/6/8
 Release date: 22nd Mar., 2018
 Version: V2.14
 Who need to upgrade: All users
 Upgrade fix or added features: Major "C" switching method
 Hold a key-switch and press the "Transpose" button, the original Major "C" key-switch will be shifted to the note that the key-switch pressed previously

Note: if you keyboard is NOT within the below range, please download firmware V3.xx

iKeyboard 3	iKeyboard 4	iKeyboard 5	iKeyboard 6
2013C3433 - 2013C33631	2013C3728 - 2013C3926	2013D0462 - 2013D0659	2013D0660 - 2013D0857
1CJ1436 - 1CJ1585	1CJ1240 - 1CJ1433	2013D2431	1CI1898 - 1CI2097
1CK1318 - 1CK1347	1CJ0935 - 1CJ0940	1CJ0935 - 1CJ0940	1CK1218 - 1CK1317
1DK5534 - 1DK5733	1DI1063 - 1DI1162	1CK1348 - 1CK1547	1DL0501 - 1DL0700
1EG00001 - 1EG00200	1DI2753 - 1DI2852	1DI0963 - 1DI1062	1EB0201 - 1EB0400
	1EG00201 - 1EG00500	1DI2653 - 1DI2752	1EG00801 - 1EG01098
		1EB0001 - 1EB0200	1EI05256 - 1EI05755
		1EG00501 - 1EG00800	
		1EI04556 - 1EI05155	

Update footprint

Version	Release date	Feature added or bug fix
V2.03	15 th Feb., 2015	Improved sustain function
V2.07	8 th Sep., 2015	Cancel function of "Modulation" return to "zero" when released
V2.08	26 th Nov., 2015	Supporting iOS9 or above
V2.09	22 nd Mar., 2016	Reverse button function for button "Octave" and "Transpose"
V2.10	27th Apr., 2016	Added the function of changing the midi channel with the button for live performance. Activate: Press button "Program", it lights, then rotate the jog wheel to change program Press button "Program" once more, it will keep flashing, then rotate the jog wheel to change the MIDI channel of the keyswitch Added the function to change the centre "C" position Activate: While press and hold button "Trans", press a keyswitch to change the "C" position to that pressed keyswitch
V2.11	7th June, 2016	"Octave" or "Trans" Up/Down buttons will light if it is not centre. Added feature: Pitch return to "Centre" when released, Modulation return to "0" when released
V2.12	6th July, 2016	Fixed the encoder knob midi message from 0-127 (Please note this is not referring to the jog wheel which need to activate with the "Jog Wheel" button)
V2.13	23rd Feb., 2017	Fixed expression function

Remark: