

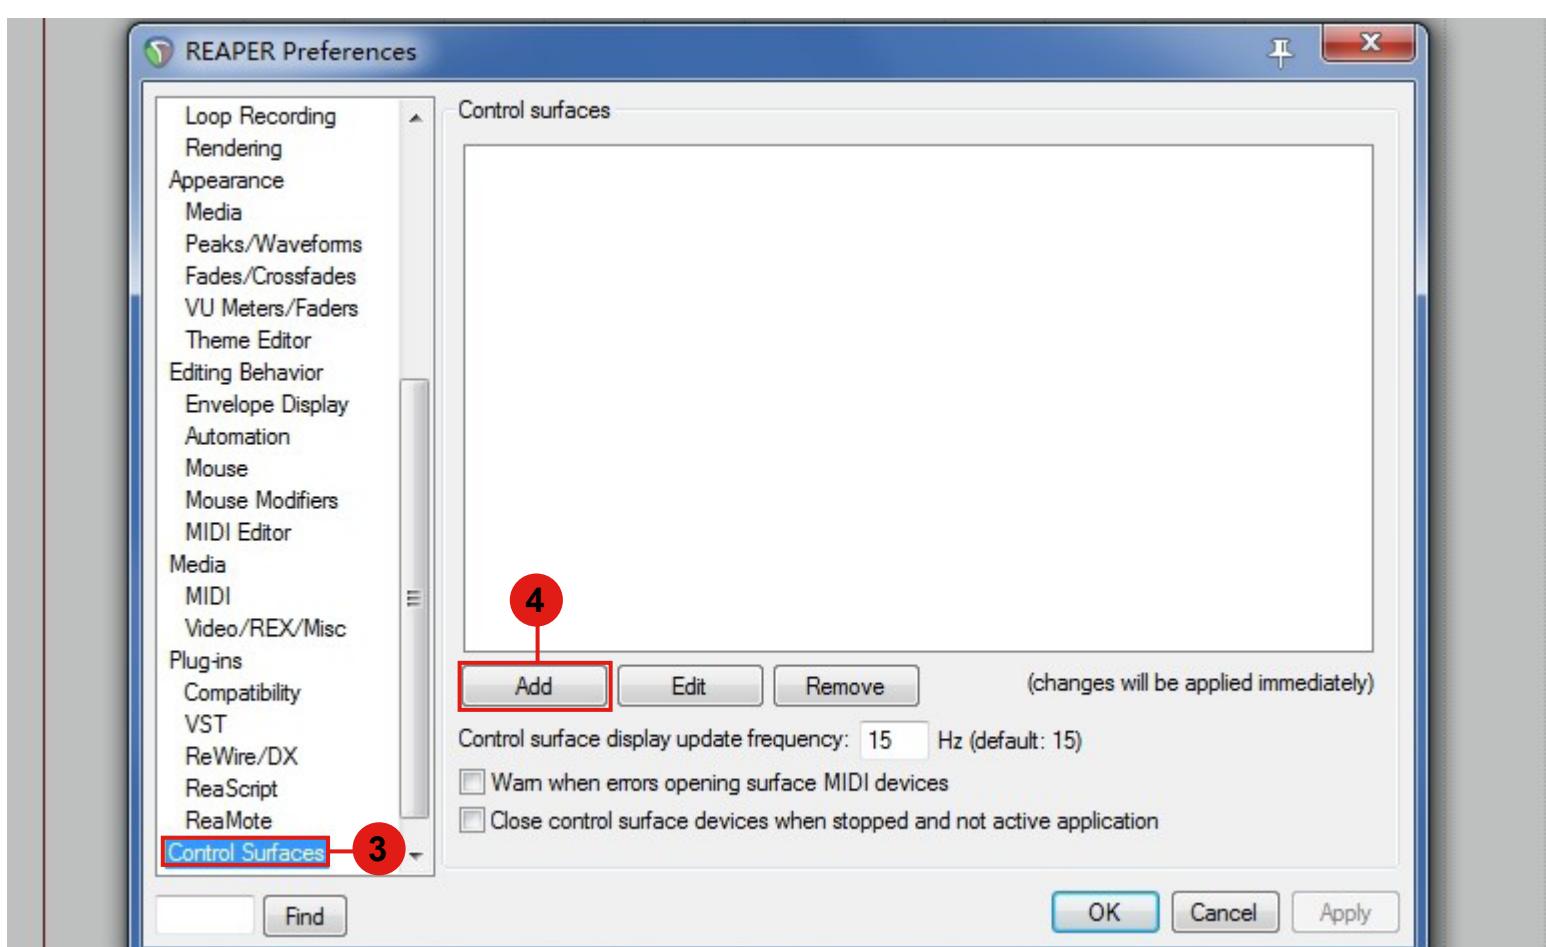


Setup up for your iKeyboard 6S controller section


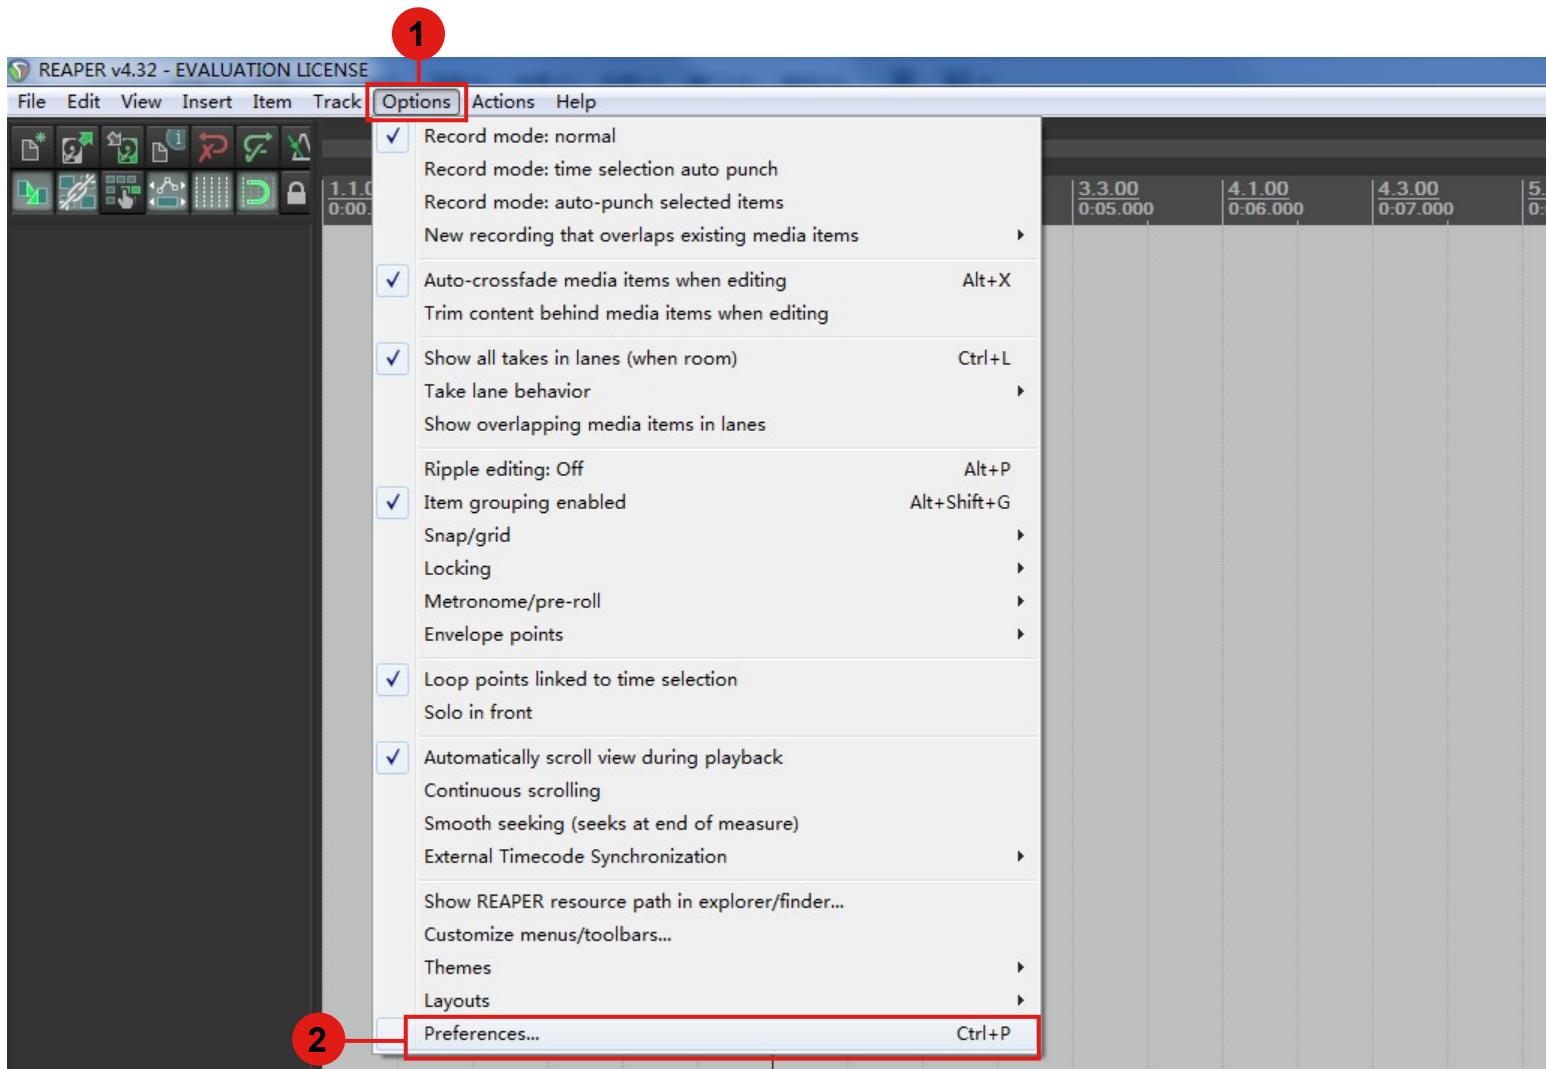



VU Meters/Faders
Theme Editor
Editing Behavior
Envelope Display
Automation
Mouse
Mouse Modifiers
MIDI Editor
Media
MIDI
Video/REX/Misc
Plug-ins
Compatibility
VST
ReWire/DX
ReaScript
ReaMote
Control Surfaces

Find

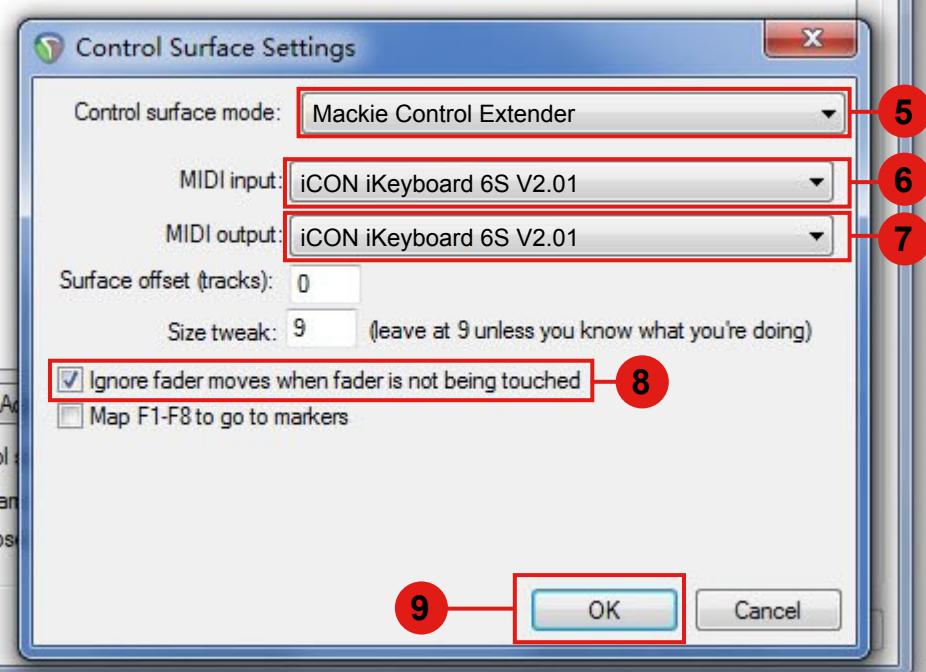

Setup for your iKeyboard 6S Keyswitch instrument input section

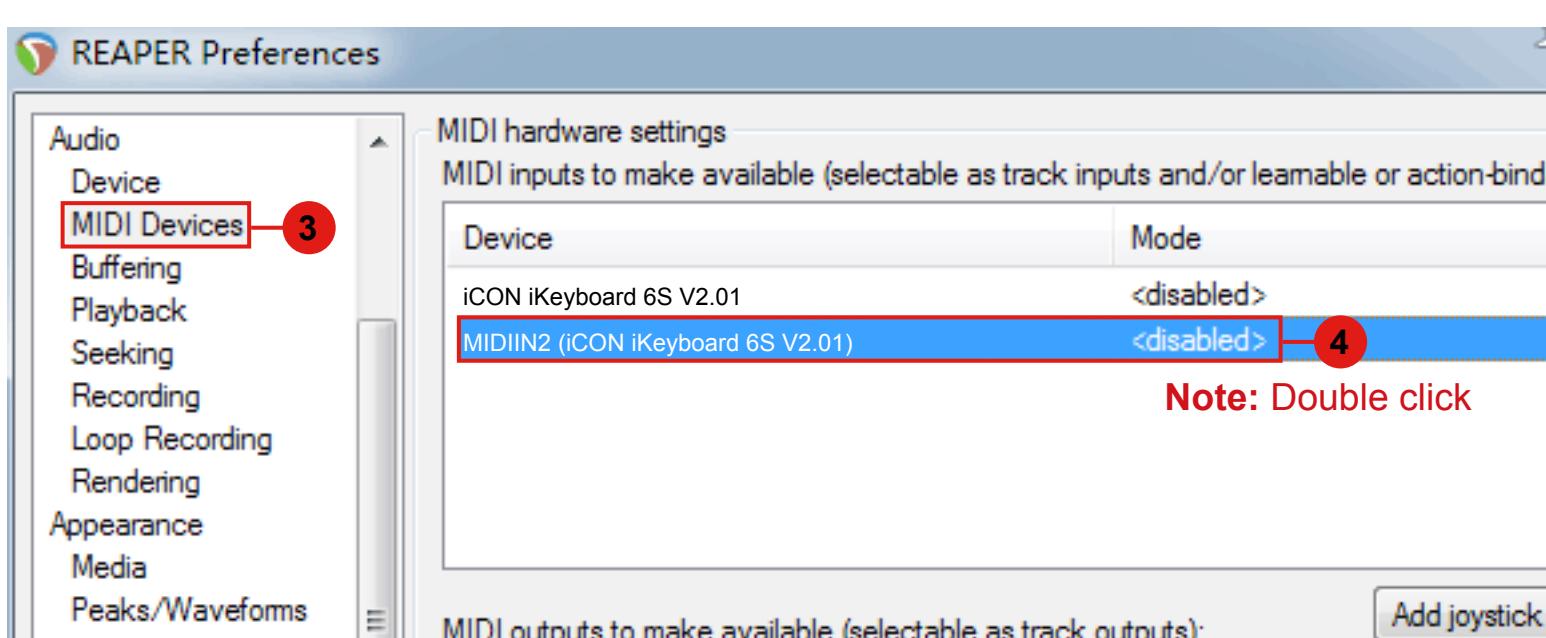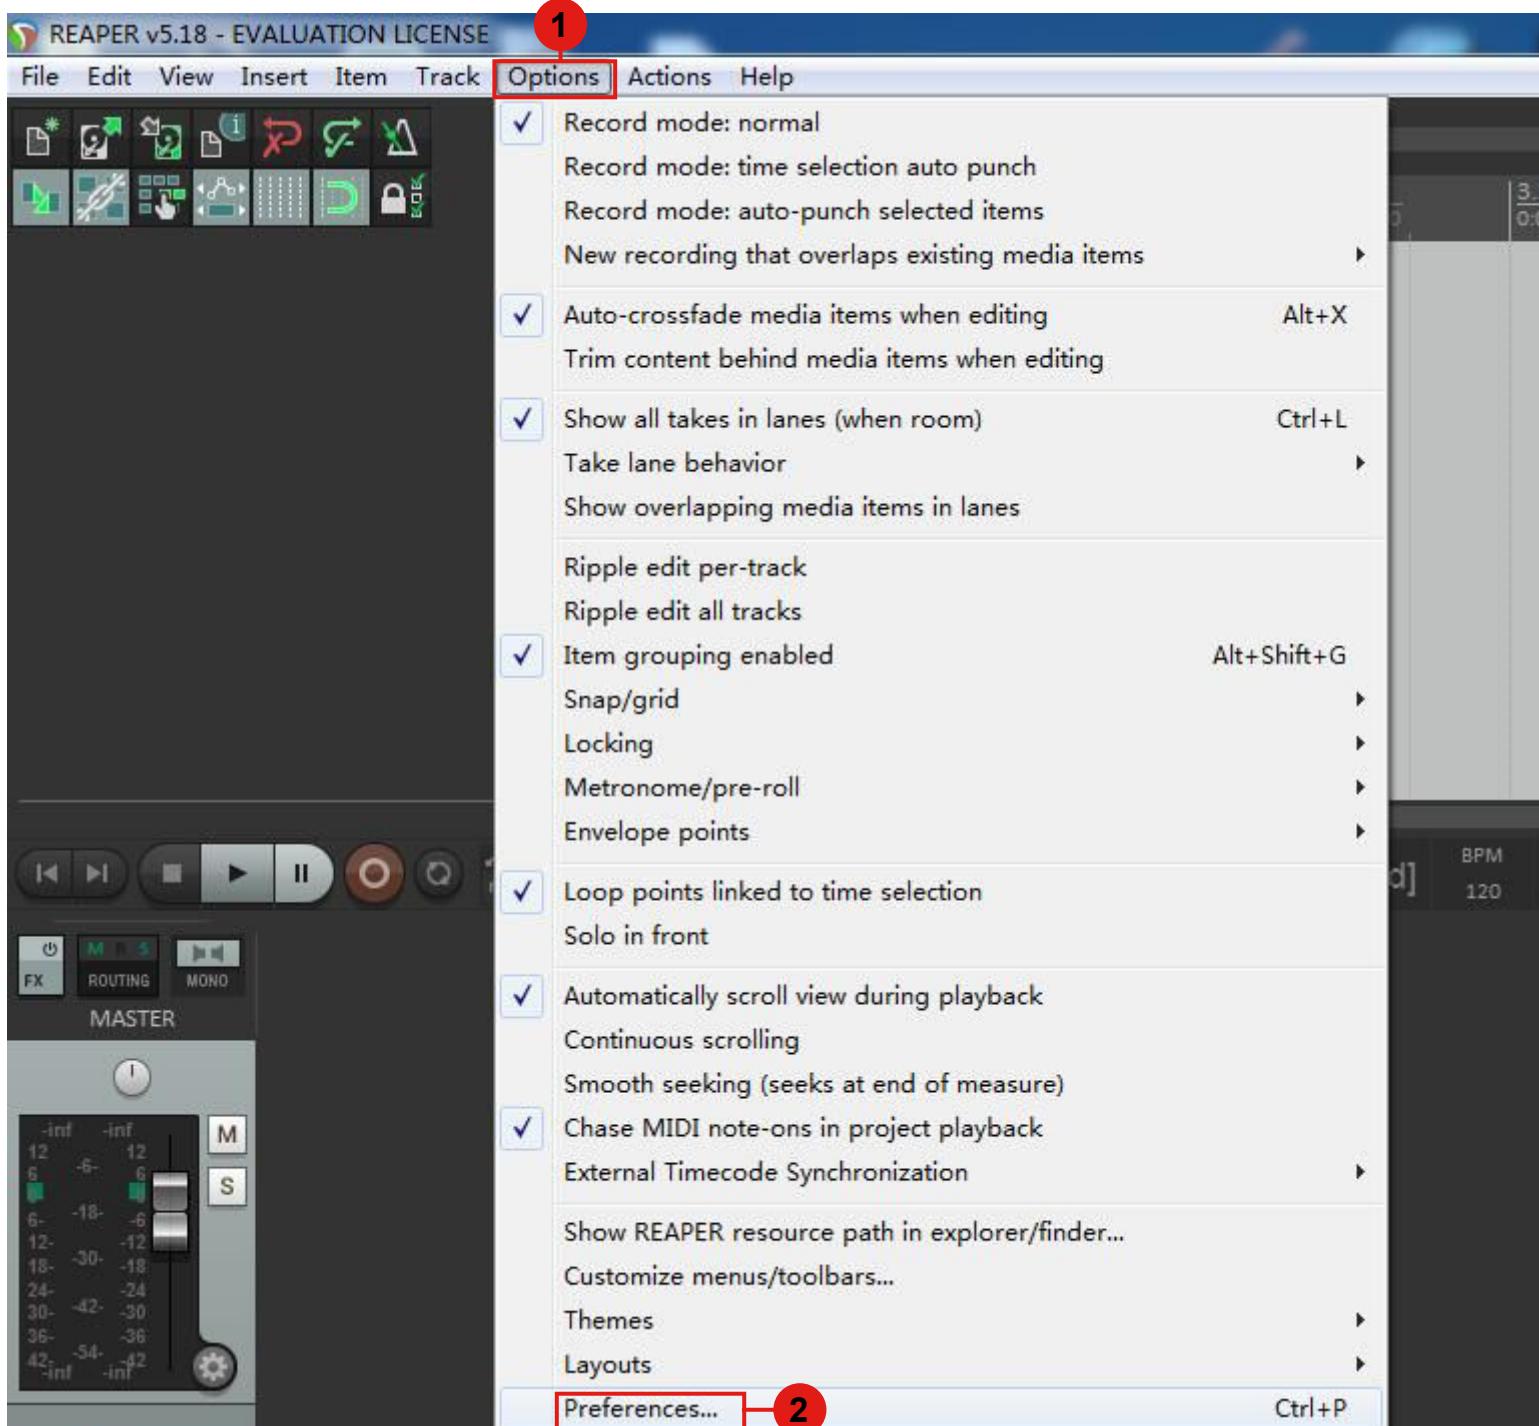

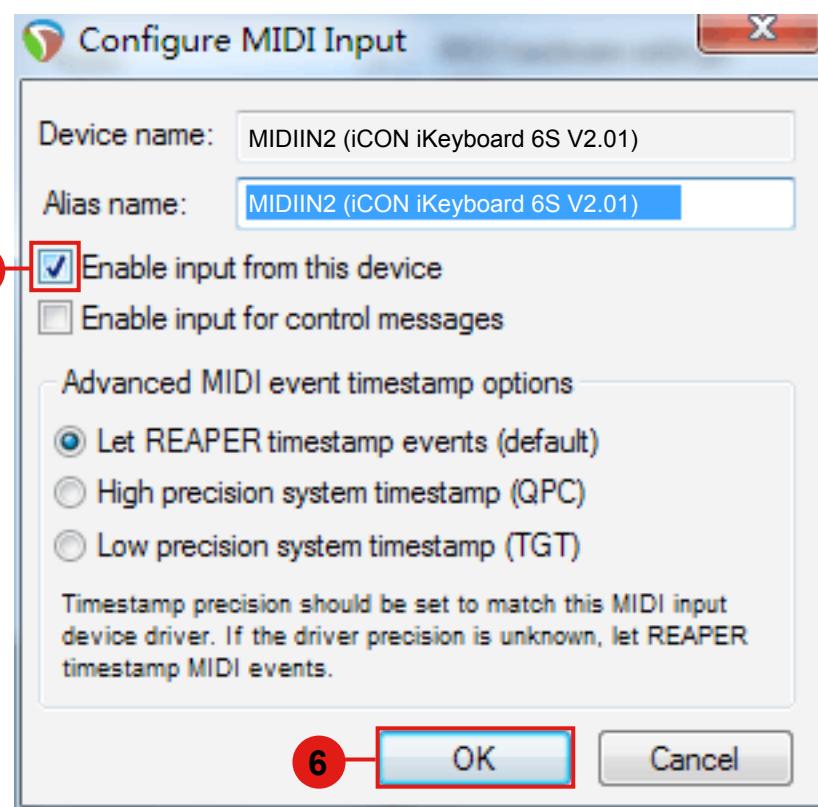

REAPER Preferences

audio
Device
MIDI Devices
Buffering
Playback
Seeking
Recording
Loop Recording
Rendering
Appearance
Media
Peaks/Waveforms
Fades/Crossfades
Track Control Panels
Editing Behavior
Envelope Display
Automation
Mouse
Mouse Modifiers
MIDI Editor
Media
MIDI
Video/REX/Misc
Plug-ins

MIDI hardware settings

MIDI inputs to make available (selectable as track inputs and/or learnable or action-bindable):

Device	Mode
iCON iKeyboard 6S V2.01	<disabled>
MIDIIN2 (iCON iKeyboard 6S V2.01)	Enabled

MIDI outputs to make available (selectable as track outputs):

Device	Mode
Microsoft GS Wavetable Synth [use cautiously]	Enabled
iCON iKeyboard 6S V2.01	<disabled>
MIDIOUT2 (iCON iKeyboard 6S V2.01)	<disabled>

Note: Double click

Restrict MIDI hardware output to one thread

Reset by: All-notes-off Pitch/sustain

Reset on: Play Stop/Stopped seek

Reset all MIDI devices

